




HP Mini 210 WWAN Card Replacement

Replacing a WWAN (Wireless Wide Area Network) card enables you to connect to the internet via mobile broadband (subscription service required).

Written By: Heather Freed

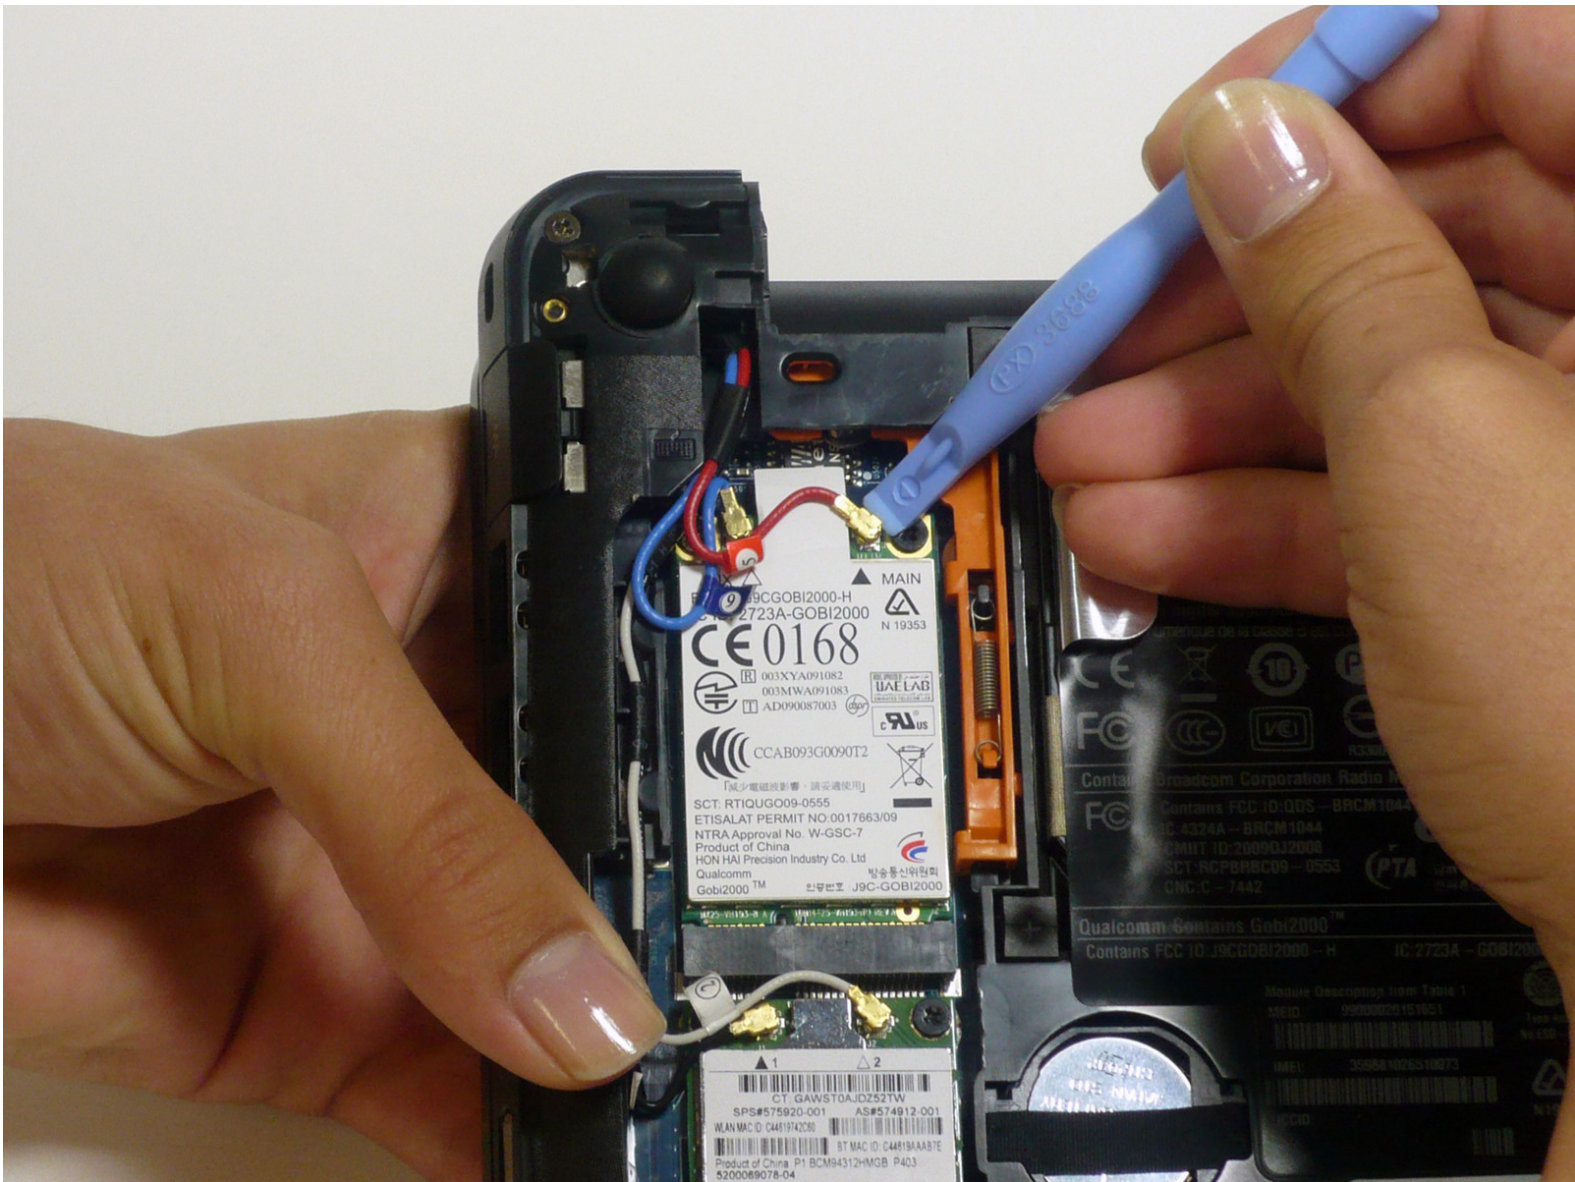

INTRODUCTION

Replacing the WWAN (Wireless Wide Area Network) card is easy and straightforward.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- i** Turn off and unplug the netbook before replacing the battery.


 - Hold the netbook top-side down with the lid closed.
 - Slide the plastic battery release latches towards the lock symbol.
- i** The left tab becomes unlocked completely, but you will need to hold the right tab towards the lock symbol as you remove the battery.

Step 2



- Remove the battery.

Step 3 — Back Case

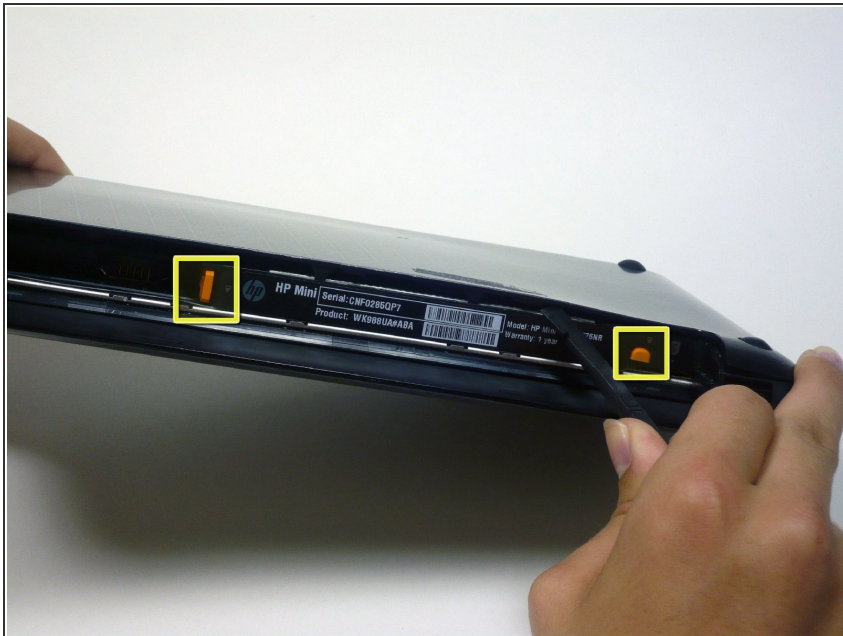

- Press both orange eject buttons simultaneously, and use a spudger to pry off the back case.

Step 4





- i** If the back case does not separate from the netbook easily, use the spudger to pry off the back case by the edge near the battery compartment, and work your way to the sides. The case will then pivot from the front edge.

Step 5



- Pull the back case off from the front edge.

Step 6 — WWAN Card

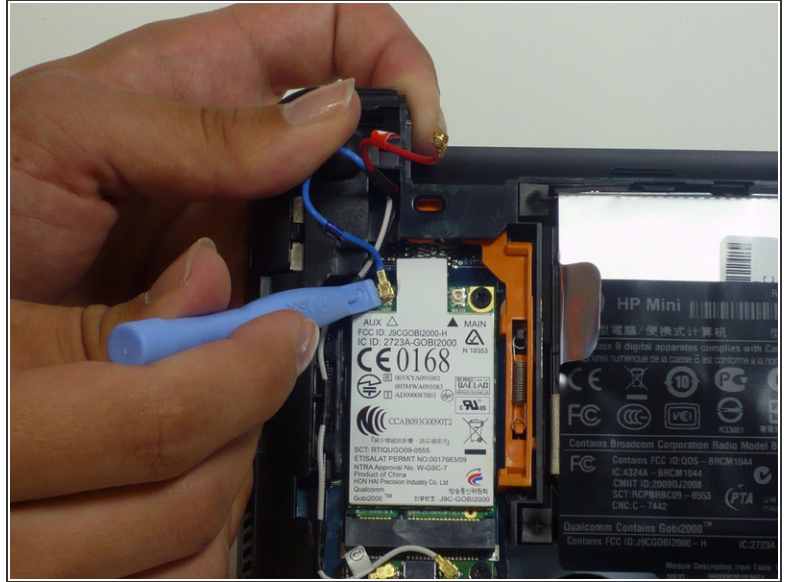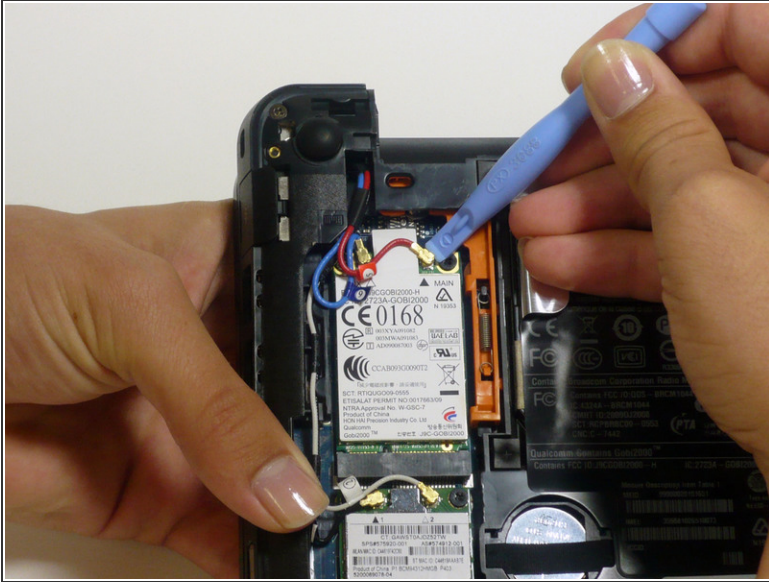


- Use a plastic opening tool to disconnect the two gold antenna cables from the WWAN card.

Step 7



- Use a Phillips #00 screwdriver to remove the 2 Phillips 2.0 and 3.0 mm screws that secure the WWAN to the system board.

Step 8

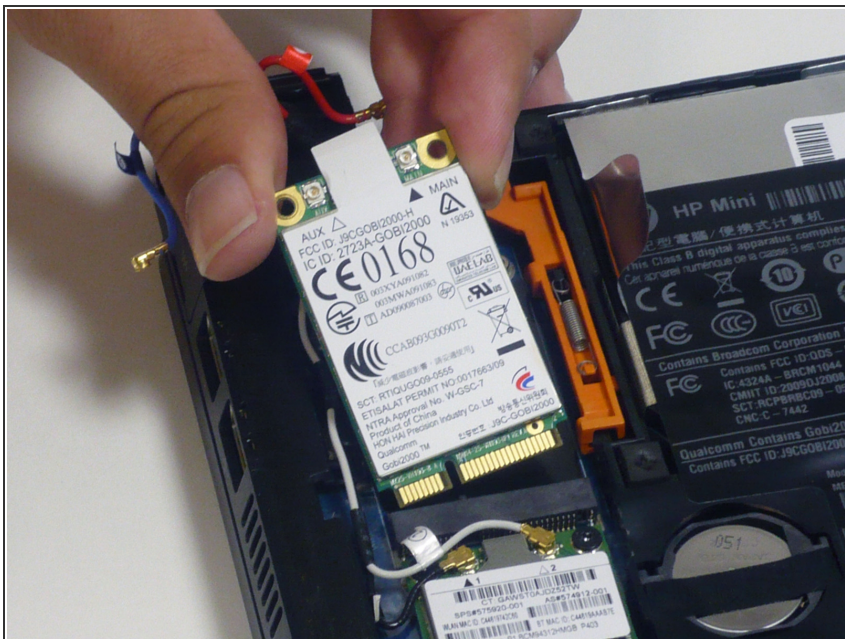

- Remove the WWAN by pulling or Slide away the WWAN card out of its slot at an angle.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 12:08:50 PM.